



by Schneider Electric

# PoE Injector (NBAC0303NA) Installation Instructions

## Overview

### **⚠ ⚠ DANGER**


#### **HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH**

- No user-serviceable parts inside. Refer servicing to qualified personnel.
- Use indoors only in a dry location.

**Failure to follow these instructions will result in death or serious injury.**

The APC by Schneider Electric Power-over-Ethernet (PoE) Injector provides power to a device through the Ethernet jack on the device.

## Inventory

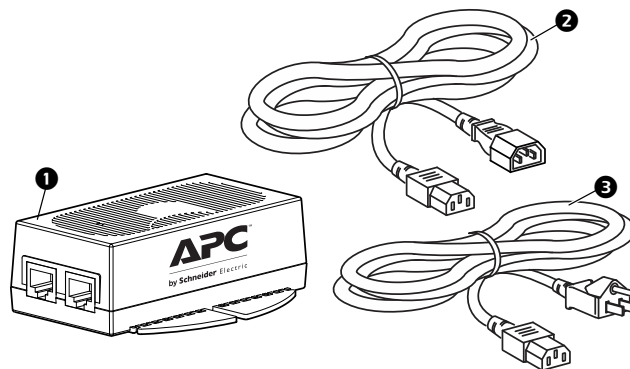

Item		Quantity
①	Power over Ethernet Injector Power Supply (100-240 VAC in, 56 VDC out), Level VI, DOE EPS 2.0/ErP2 Compliant	1
②	Power Cord, 6 ft Black, IEC-320-C14 to IEC-320-C13, RoHS Compliant	1
③	Power Cord, 6 ft Black, NEMA 5-15P to IEC-320-C13, #14 AWG cord RoHS Compliant	1



## Status LED

The APC by Schneider Electric PoE Injector features a status LED that monitors the current power mode.


Color	Status
Flashing Green	Fault Detected.
Green	Injecting Full Power/Power Up Mode.

# Installation

1. Plug one end of an Ethernet cable into the Ethernet port of the device.
2. Plug the other end of the cable into the LAN - DC port on the injector.
3. Plug another Ethernet cable into the LAN port on the injector.
4. Plug the Ethernet cable into an Ethernet wall jack or hub.

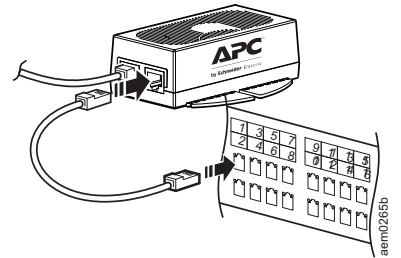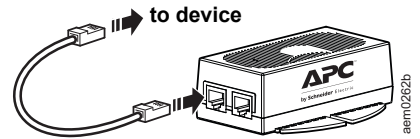

5. Connect the female end of the appropriate power cord to the power socket on the PoE injector.

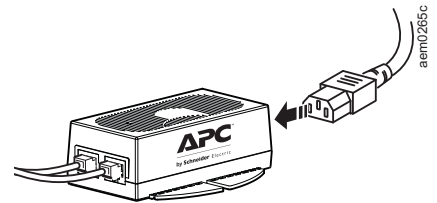

6. Plug the male end of the appropriate power cord into a grounded power outlet.

Customer support and warranty information are available on the APC by Schneider Electric website, [www.apc.com](http://www.apc.com).